

NOTE: Observe all safety precautions and wear all safety equipment before proceeding!

1. The easiest way to install Slide-lok Slatwall® is from the floor up. Start by locating the wood studs and proceed to install the first piece of Slide-lok Slatwall®. Be sure to level the Slide-lok Slatwall® before screwing them into the wooden studs.

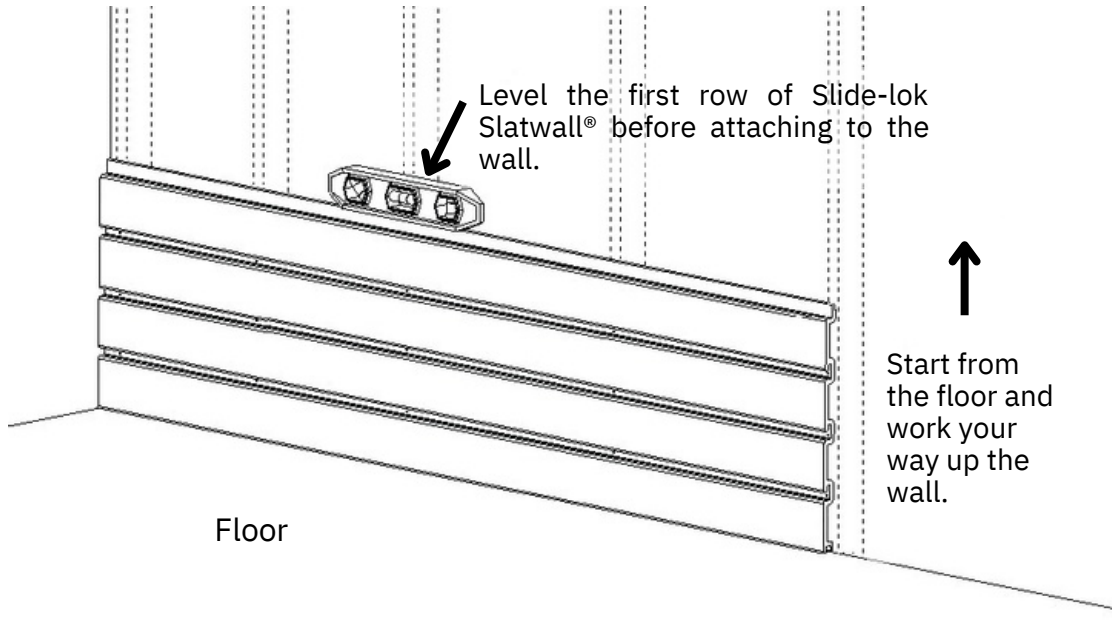


Figure 1. Level Slide-lok Slatwall® before attaching it to the wall

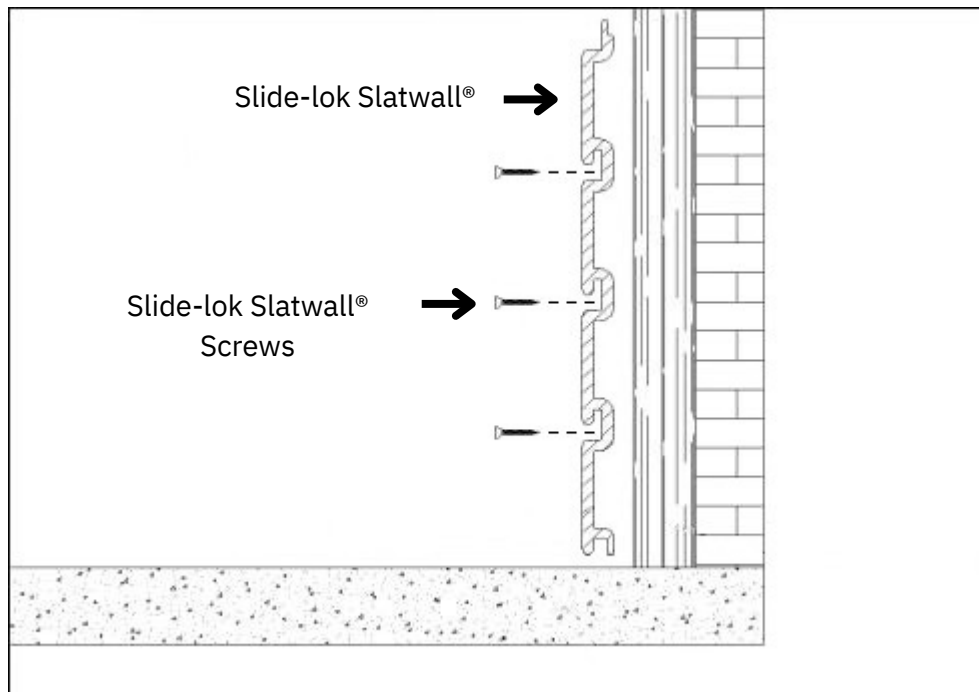


Figure 2. Slide-lok Slatwall® installation.

2. Proceed to install the next Slide-lok Slatwall® on top the first leveled row. Slide-lok Slatwall® can be cut horizontally or vertically to accommodate room dimensions. Preferably using an electric saw with a thin sharp blade for Slide-lok Slatwall® cutting.

NOTE: Observe all safety precautions and wear all safety equipment before proceeding!

1. The easiest way to install Slide-lok Slatwall® is from the floor up. Install the first piece of Slide-lok Slatwall®. Pre-drill the concrete with 5/32 drill bit. Space Tapcons® about 16 inches apart.

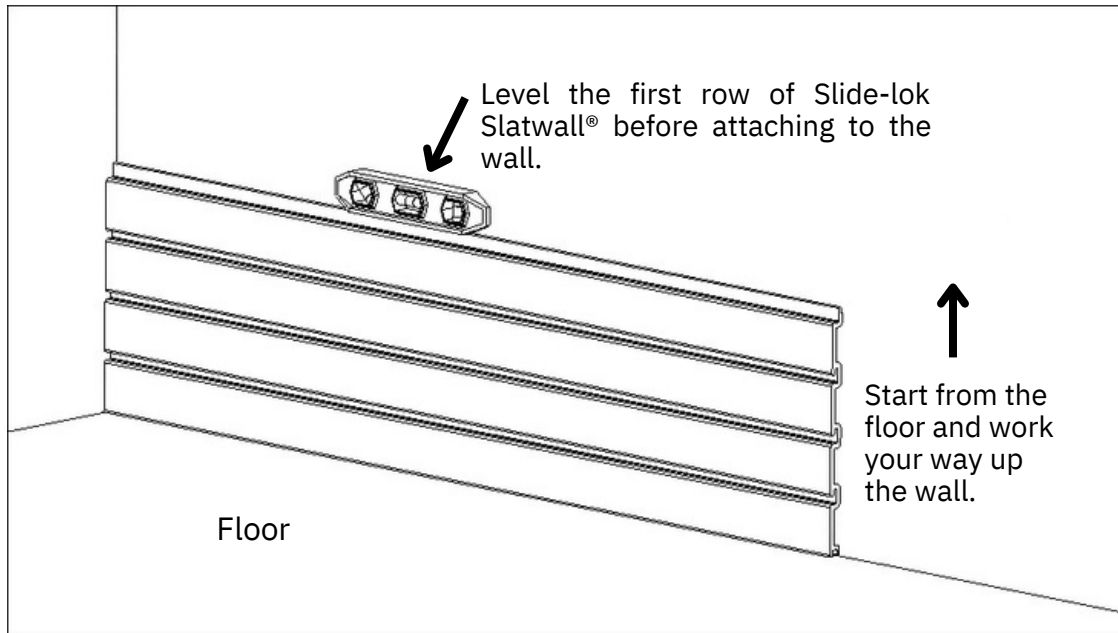


Figure 1. Level Slide-lok Slatwall® before attaching it to the wall

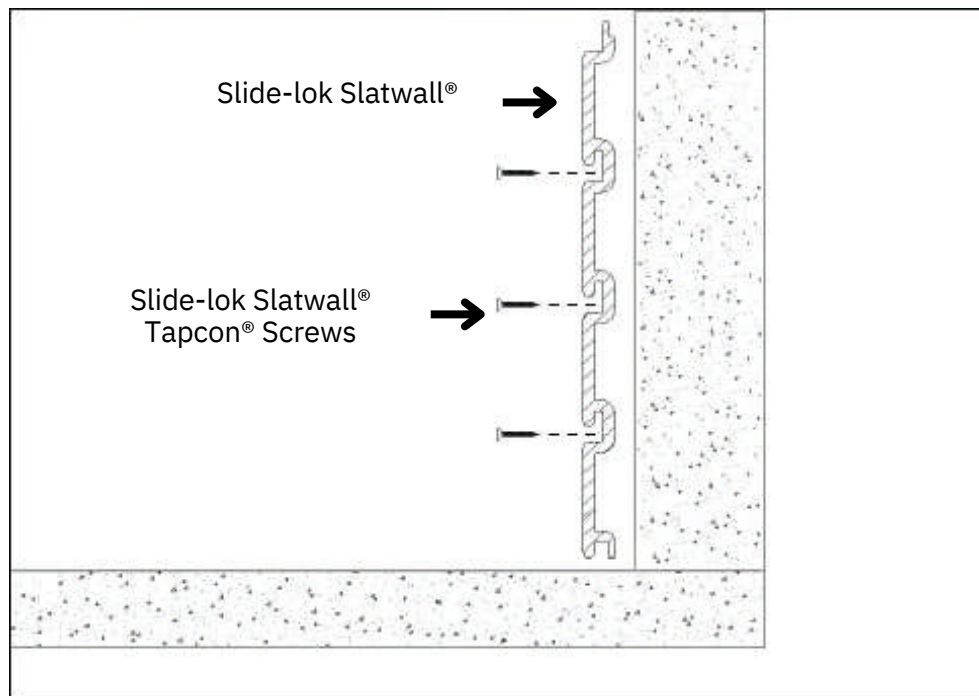


Figure 2. Slide-lok Slatwall® installation.

2. Proceed to install the next Slide-lok Slatwall® on top the first leveled row. Slide-lok Slatwall® can be cut horizontally or vertically to accommodate room dimensions. Preferably using an electric saw with a thin sharp blade for Slide-lok Slatwall® cutting.